COOKTOP PARTS

For Model: RCC3024KB0, RCC3024KQ0, RCC3024KT0
(Black) (Designer White) (Biscuit)

30" ELECTRIC
BUILT−IN COOKTOP

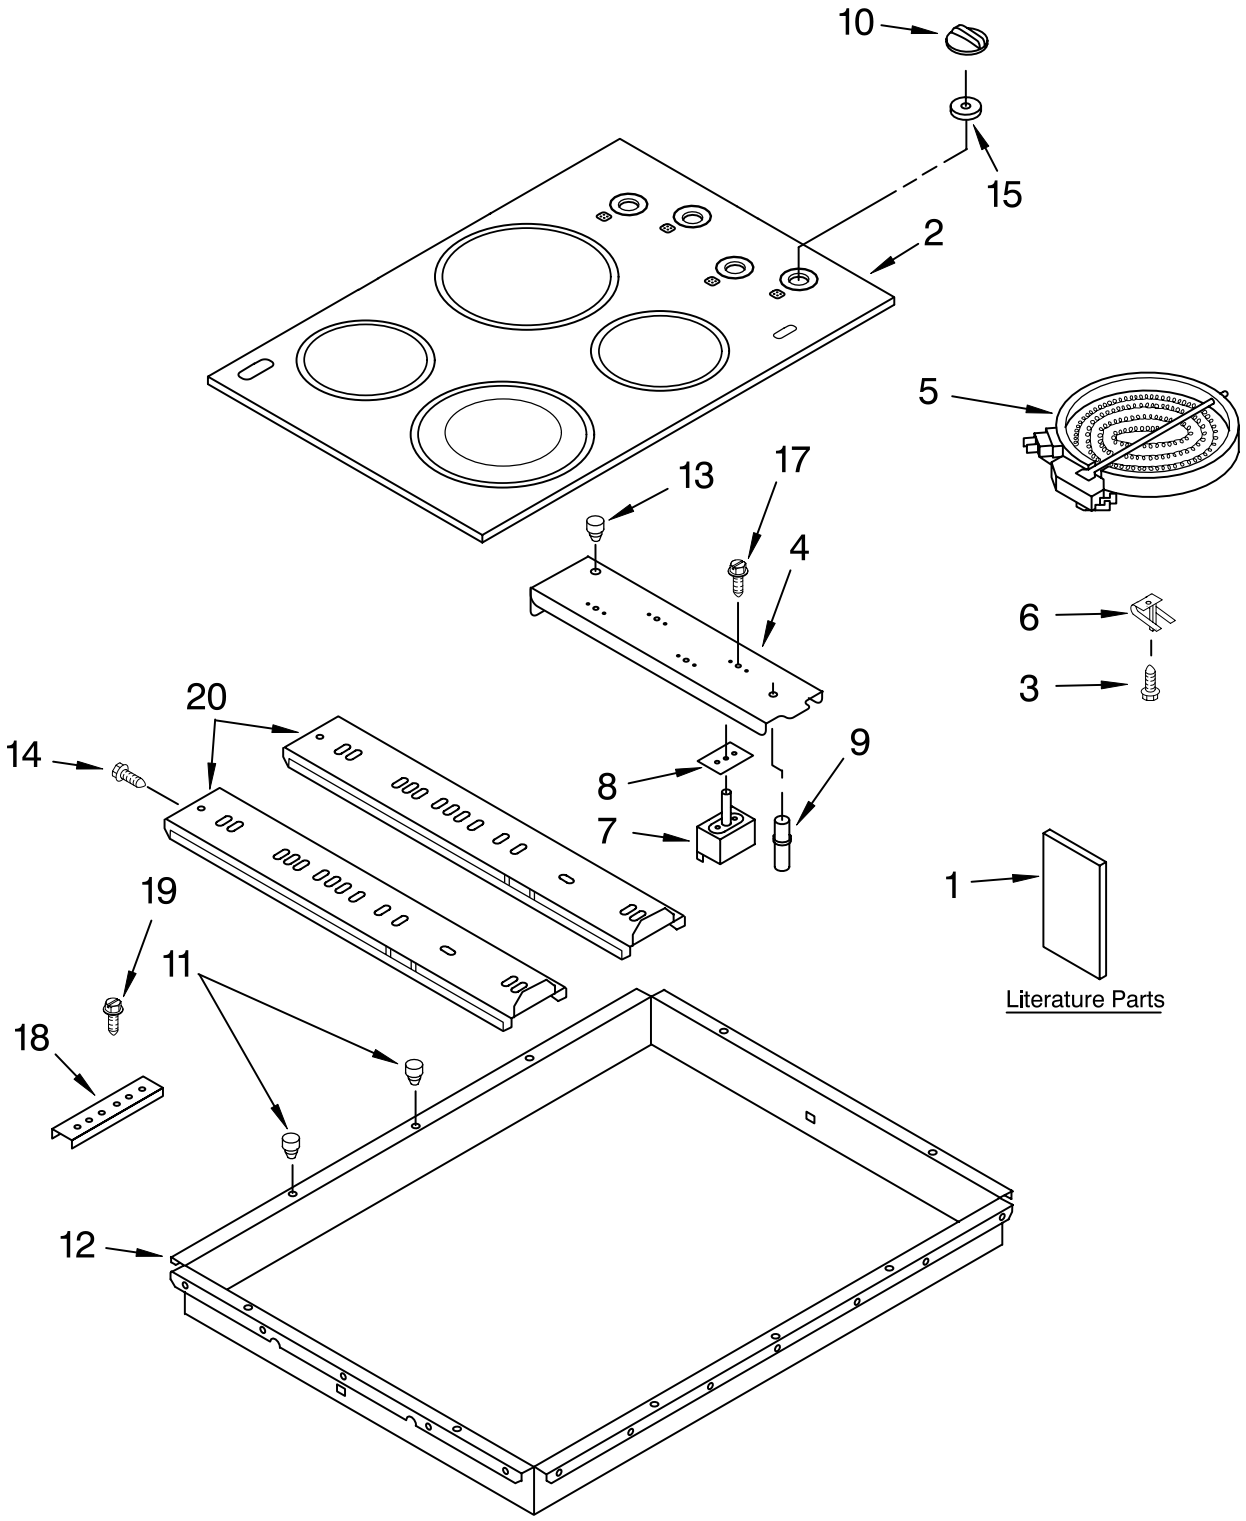

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Model: RCC3024KB0, RCC3024KQ0, RCC3024KT0
(Black) (Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT4455836	Installation Instructions
	LIT3191772	Wiring Diagram
	LIT8284862	Use & Care Guide
	LIT3191638	Safe Cooking Tips
	COOKTOP PARTS	
2		Cooktop, Glass
	8284932	Black
	8284930	Designer White
	8284931	Biscuit
3	246119	Screw (8)
4	3191310	Bracket, Switch Mounting
5		Element, Surface
	8272567	1200W LR−RF
	8272566	1800W RR
	8523692	2500W LF
6	3191791	Spring,Locator (8)
7		Switch, Infinite
	3191049	Use W/1200W Left Rear & Right Front Burners
	3191050	Use W/1700W Right Rear Burner
	4454541	Use W/2400W Left Front Burner
8	3183956	Seal, Switch Cover
9	3191952	Light, Indicator
10		Knob, Control (4)
	3196231	Black
	3196232	Designer White
	8272506	Biscuit
11	9750835	Bumper, Silicone
12	4456401	Box, Burner
13	3191953	Bumper, Silicone
14	3196537	Screw
15	3182435	Seal, Switch Shaft (4)
17	311865	Screw
18	3183401	Bracket, Mounting
19	3179557	Screw
20	3191515	Rail, Element
	3192439	Seal, Limiter

MISCELLANEOUS PARTS

Illus. No.	Part No.	DESCRIPTION
SPLICING WIRES−−25FT. LENGTH		
	242828	Wire, Black 12 Ga. 150° C
	242820	Wire, Black 14 Ga. 150° C
	242822	Wire, Blue 14 Ga. 150° C
	242830	Wire, Brown 14 Ga. 200° C
	242823	Wire, Green 14 Ga. 150° C
	242824	Wire, Orange 14 Ga. 150° C
	242829	Wire, Red 12 Ga. 150° C
	242825	Wire, Red 14 Ga. 150° C
	242831	Wire, Red 14 Ga. 200° C
	242826	Wire, White 14 Ga. 150° C
	242827	Wire, Yellow 14 Ga. 150° C
	242832	Wire, Yellow 14 Ga. 200° C
ACCESSORY PARTS		
	3191048	Cleaner, Glass
WIRING HARNESS PARTS		
	4455280	Wiring Harness Surface Unit
	3192170	Harness Conduit
	3400015	Screw, 10−32 x 3/8